


Installation & Test Guide


For HP LaserJets & MFPs with FutureSmart Host USB(2)

Extending the Resources and Abilities of Your Printer


WARNING: Do not insert your LaserJet Flash Memory USB device into your PC or any system other than your printer. PCs and other systems can automatically erase the device. The device is only compatible with the USB connectors located *inside* your printer.

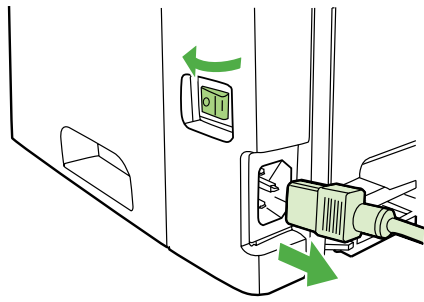


1 Use the power switch to turn off the printer and then unplug the power cord from the printer.

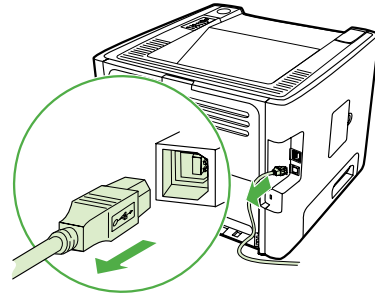

2 Unplug all remaining cables and cords from the printer.

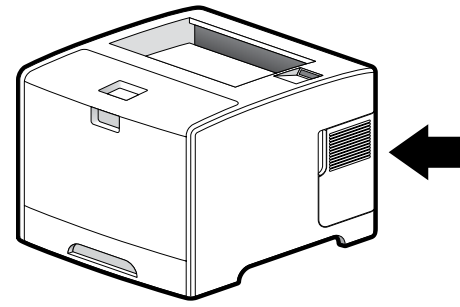


3 Locate the access door located on the side of the printer. The location can vary by model.

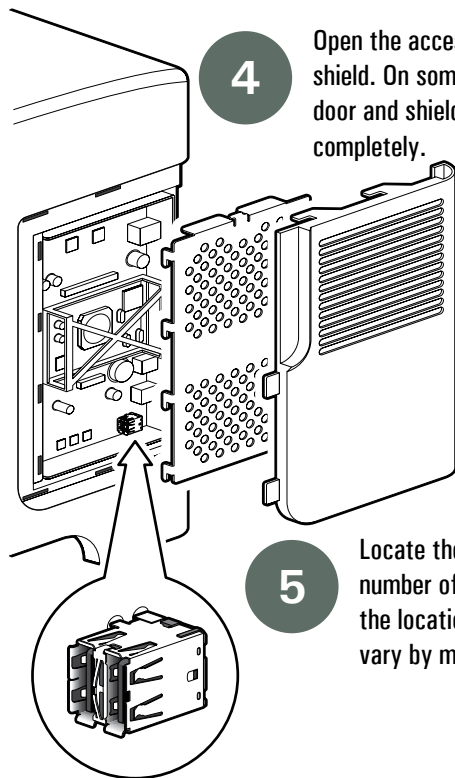

4 Open the access door and metal shield. On some models the door and shield may remove completely.

5 Locate the USB connectors. The number of USB connectors, and the location and orientation can vary by model.

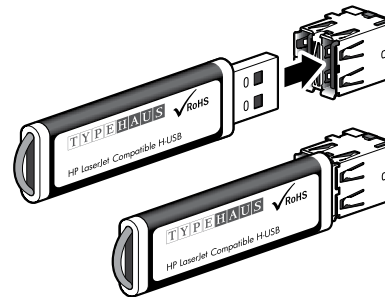

6 Insert the LaserJet Flash Memory into the USB connector. The LaserJet Flash Memory will only insert in one orientation. If it does not insert easily, rotate it and try again. Never use strong force. Strong force may damage your printer.

7 Close the shield and access door, reconnect all cables and cords, then turn the power switch on.

Congratulations!

You are now ready to store resources on your LaserJet Flash Memory. To test your LaserJet Flash Memory, simply use your printer's control panel to print a File Directory. The File Directory is different than the PCL Font List. On most printer models, select "Information" and then "File Directory".

See the reverse side of this sheet for an example of the first page of a File Directory showing the LaserJet Flash Memory. The File Directory may vary a little between different printer models. If the File Directory shows that a storage device was found, then the printer has found your LaserJet Flash Memory.

TypeHaus Reorder Part Number: 11B70K-00

Solutions
Business Partner



TypeHaus, Inc.
655 Second Street
Encinitas, CA 92024
760.334.3555
www.typehaus.com

© 2011 TypeHaus, Inc. All rights reserved. (2364-111220A)

HP LaserJet Printers

File Directory Page



Storage Information

Device Type: USB STORAGE
 Device Location: USB STORAGE 1
 Device Capacity: 955 MB
 Free Space: 948 MB
 Write Protect: DISABLED
 Hard Drive Encryption Status:
 Not applicable

Permissions	Owner	File Size	Directory/File Name
drwxrwxrwx	0	Directory	0:
drwxrwxrwx	0	Directory	0:\PostScript
drwxrwxrwx	0	Directory	0:\PJL
drwxrwxrwx	7	Directory	0:\webServer
-rw-rw-r--	7	205	.java_login.config
drwxrwxrwx	7	Directory	0:\webServer\config
-rw-rw-r--	7	22062	soe.xml
-r-xr-xr-x	7	45	version.6
drwxrwxrwx	7	Directory	0:\webServer\home
-r-xr-xr-x	7	171	device.htm
-r-xr-xr-x	7	219	hostmanifest
drwxrwxrwx	7	Directory	0:\webServer\home\JobCapabilities
-r-xr-xr-x	7	14330	JobCapabilitiesTicket.zip
drwxrwxrwx	7	Directory	0:\webServer\home\images
-r-xr-xr-x	7	68	transparent.pixel.gif
-r-xr-xr-x	7	54	tab_right.gif
-r-xr-xr-x	7	206	question.gif
-r-xr-xr-x	7	140	menus_vert_line.gif
-r-xr-xr-x	7	133	menus_plus_node.gif
-r-xr-xr-x	7	130	menus_plus_lastnode.gif
-r-xr-xr-x	7	129	menus_minus_node.gif
-r-xr-xr-x	7	125	menus_minus_lastnode.gif
-r-xr-xr-x	7	11281	masthead.jpg
-r-xr-xr-x	7	116	logwarning.jpg
-r-xr-xr-x	7	461	logo.gif
-r-xr-xr-x	7	106	loginfo.jpg
-r-xr-xr-x	7	268	hplgo_inline.gif
-r-xr-xr-x	7	1069	go_button2red.gif
-r-xr-xr-x	7	479	go_button2greencheck.gif
-r-xr-xr-x	7	1070	go_button2green.gif
-r-xr-xr-x	7	5258	chip_red.jpg
-r-xr-xr-x	7	79	binOK.gif
-r-xr-xr-x	7	91	binUNKNOWN.gif
-r-xr-xr-x	7	79	binFULL.gif
-r-xr-xr-x	7	74	binEMPTY.gif
-r-xr-xr-x	7	272	Yellow_Toner.gif
-r-xr-xr-x	7	401	Yellow_Image_Drum.gif
-r-xr-xr-x	7	270	Magenta_Toner.gif
-r-xr-xr-x	7	605	Magenta_Image_Drum.gif
-r-xr-xr-x	7	896	LevelUnknown.gif
-r-xr-xr-x	7	174	LevelEmpty.gif
-r-xr-xr-x	7	186	Level40-100.gif
-r-xr-xr-x	7	182	Level20-40.gif
-r-xr-xr-x	7	185	Level10-20.gif
-r-xr-xr-x	7	185	Level1-10.gif
-r-xr-xr-x	7	341	Image_Cleaning_Kit.gif
-r-xr-xr-x	7	261	Cyan_Toner.gif