


# Installation & Test Guide


For HP LaserJets & MFPs with HP FutureSmart USB(2)

Extending the Resources and Abilities of Your Printer


**WARNING:** Do not insert your MICR Font Solution USB device into your PC or any system other than your printer. PCs and other systems can automatically erase the device. The device is only compatible with the USB connectors located *inside* your printer.

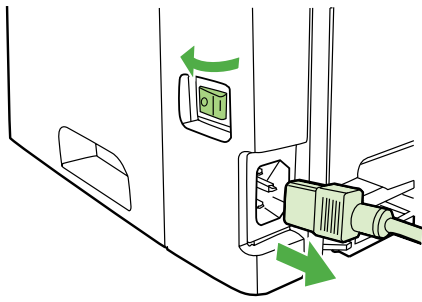


**1** Use the power switch to turn off the printer and then unplug the power cord from the printer.

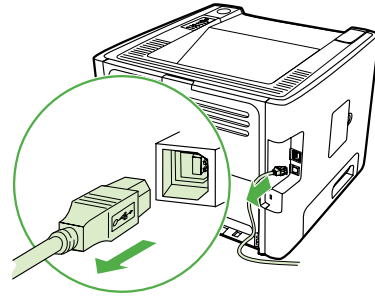

**2** Unplug all remaining cables and cords from the printer.

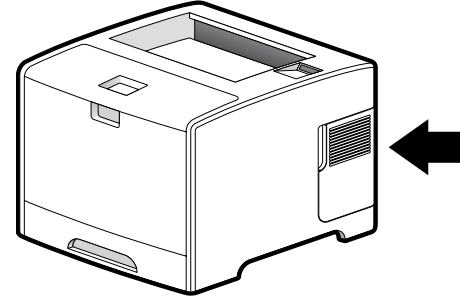


**3** Locate the access door located on the side of the printer. The location can vary by model.

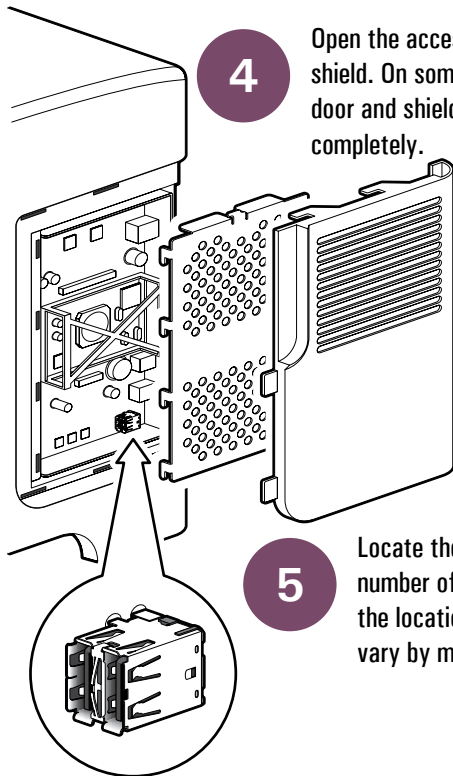

**4** Open the access door and metal shield. On some models the door and shield may remove completely.

**5** Locate the USB connectors. The number of USB connectors, and the location and orientation can vary by model.

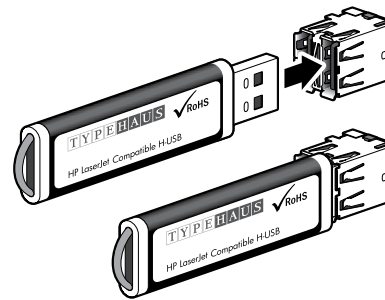

**6** Insert the MICR Font Solution into the USB connector. The MICR Font Solution will only insert in one orientation. If it does not insert easily, rotate it and try again. Never use strong force. Strong force may damage your printer.

**7** Close the shield and access door, reconnect all cables and cords, then turn the power switch on.

## Congratulations!

You are now ready to print MICR using your printer. To test your MICR Font Solution, simply use your printer's control panel to print a PCL Font List. On most printers, select "Information" and then "Print PCL Font List".

See the reverse side of this sheet for an example of the first page of a PCL Font List showing the MICR Font Solution font. The PCL Font List may vary a little between different printer models, but the MICR font will be shown somewhere in the list.

### PCL5 Font Selection

Ec (0QEc (s0p8h8 . 4v0s0b0T

#### Character Mapping

MICR	Char	Dec	Hex
0	0	48	30
1	1	49	31
2	2	50	32
3	3	51	33
4	4	52	34
5	5	53	35
6	6	54	36
7	7	55	37
8	8	56	38
9	9	57	39
:	A	65	41
'	B	66	42
''	C	67	43
'''	D	68	44

TypeHaus Reorder Part Number: 11B72K-36

Solutions  
Business Partner



TypeHaus, Inc.  
655 Second Street  
Encinitas, CA 92024  
760.334.3555  
www.typehaus.com

# HP LaserJet Printers PCL Font List



## USB STORAGE Resident Fonts

Font	Pitch/Point	Escape Sequence	Font #	Font ID
ABCDEFGHIJ; <sup>3</sup> ç <sup>3</sup> ´¶ <sup>3</sup> , <sup>3</sup> »½Á#¢	10.00/10.0	<esc>(00<esc>(s0p10.00h10.0v0s0b104t	USB1 1	
OCRA				
TH MICR 0Q	8.00/8.4	<esc>(00<esc>(s0p8.00h8.4v0s0b0t	USB1 2	
TH MICR 0Q 600	8.00/8.4	<esc>(00<esc>(s0p8.00h8.4v0s0b0t	USB1 3	
ABCDEFGHIJ; <sup>3</sup> ç <sup>3</sup> ´¶ <sup>3</sup> , <sup>3</sup> »½Á#\$	10.00/10.0	<esc>(10<esc>(s0p10.00h10.0v0s0b104t	USB1 4	
OCRB				
TH MICR 600	8.00/8.0	<esc>(8M<esc>(s0p8.00h8.0v0s0b80t	USB1 5	
TH MICR	8.00/10.0	<esc>(8M<esc>(s0p8.00h10.0v0s0b100t	USB1 6	
TH MICR 600 Ent	8.05/10.0	<esc>(8M<esc>(s0p8.05h10.0v0s0b100t	USB1 7	
TH MICR 600 Ent2	8.00/10.0	<esc>(8M<esc>(s0p8.00h10.0v0s0b100t	USB1 8	
TH MICR-600 100	8.00/12.0	<esc>(100<esc>(s0p8.00h12.0v0s0b360t	USB1 9	
TYPEHAUS	0.46/20.0	<esc>(320<esc>(s0p0.46h20.0v0s0b24t	USB1 10	
© Copyright 2010. All rights Reserved.				

## Internal Scalable and Bitmapped Fonts

Font	Pitch/Point	Escape Sequence	Font #	Font ID
Courier	Scalable	<esc>( [ ] <esc>(s0p [ ] h0s0b4099t	INTERNAL 0	
CG Times	Scalable	<esc>( [ ] <esc>(s1p [ ] v0s0b4101t	INTERNAL 1	
<b>CG Times Bold</b>	Scalable	<esc>( [ ] <esc>(s1p [ ] v0s3b4101t	INTERNAL 2	
<i>CG Times Italic</i>	Scalable	<esc>( [ ] <esc>(s1p [ ] v1s0b4101t	INTERNAL 3	
<b><i>CG Times Bold Italic</i></b>	Scalable	<esc>( [ ] <esc>(s1p [ ] v1s3b4101t	INTERNAL 4	
CG Omega	Scalable	<esc>( [ ] <esc>(s1p [ ] v0s0b4113t	INTERNAL 5	
<b>CG Omega Bold</b>	Scalable	<esc>( [ ] <esc>(s1p [ ] v0s3b4113t	INTERNAL 6	
<i>CG Omega Italic</i>	Scalable	<esc>( [ ] <esc>(s1p [ ] v1s0b4113t	INTERNAL 7	
<b><i>CG Omega Bold Italic</i></b>	Scalable	<esc>( [ ] <esc>(s1p [ ] v1s3b4113t	INTERNAL 8	
<i>Coronet</i>	Scalable	<esc>( [ ] <esc>(s1p [ ] v1s0b4116t	INTERNAL 9	
<b>Clarendon Condensed</b>	Scalable	<esc>( [ ] <esc>(s1p [ ] v4s3b4140t	INTERNAL 10	
Univers Medium	Scalable	<esc>( [ ] <esc>(s1p [ ] v0s0b4148t	INTERNAL 11	
<b>Univers Bold</b>	Scalable	<esc>( [ ] <esc>(s1p [ ] v0s3b4148t	INTERNAL 12	
<i>Univers Medium Italic</i>	Scalable	<esc>( [ ] <esc>(s1p [ ] v1s0b4148t	INTERNAL 13	

[ ] Pitch: 0.10 - 576 [ ] Symbol set [ ] Point size: 0.25 - 999.75  
See your Printer User's Manual for more information.